




### Button overview

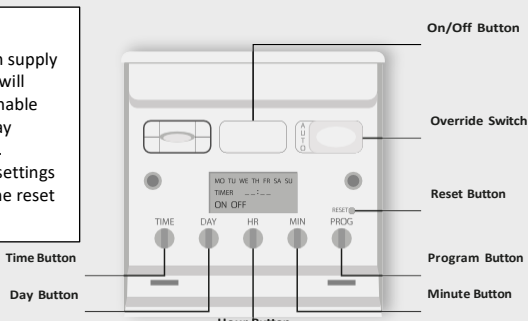

**Note:**

1. After installation with main supply back on, the internal battery will need to be fully charged to enable correct operation. If no display gently press the reset button.
2. To clear any programmed settings to four dashes gently press the reset button.

### Setting the current time and day

1. Press and hold down the **TIME** button (keep this button pressed during the entire process).
2. Press the **DAY** button until the present day is displayed.
3. Press the **HR** and **MIN** buttons until the correct time is shown on the display.
4. Release the **TIME** button to revert back to default screen.



### Setting up a program

1. Press the **PROG** button to enter the programming mode.
2. Press the **DAY** button to select the desired day(s) or day block.
3. To enter the **ON** time, press the **HR** Button until you reach your desired hour.
4. Press the **MIN** button until you reach your desired minutes.
5. Press the **PROG** button to enter the desired **OFF** time (repeat steps 3 and 4).
6. When completed, press the **TIME** button to exit programming mode.

There is a maximum of 6 ON/OFF times available. Each ON/OFF time can be used individually on any day(s) throughout the week, OR can be set to repeat on one of the following combination of days:

Monday to Sunday, Monday to Friday, Saturday and Sunday, Monday to Saturday

### Programming example

**EXAMPLE:**

If you wish to switch a light **ON** automatically every day at 20:10 and **OFF** at 23:06.

1. Press the **PROG** button and release (the colon in the centre of the display will flash and the first time can be entered).
2. Press **DAY** until the required day or day block is displayed, in this case, press until **ALL DAYS** are displayed in the top of the display (**MO TU WE TH FR SA SU**).
3. Press the **HR** button until 20 is shown on the display.
4. Press **MIN** until 10 minutes are set (20:10).
5. Press **PROG** so the first **OFF** time can be entered.
6. Repeat steps 3 and 4 until 23:06 is shown on the display.
7. When the desired programme has been set, press **TIME** to exit programming mode and revert back to the default display.

The programme has now been set.



### Random function

**NOTE:** The random feature works by randomly shifting the ON/OFF times of your set programmes between 2 and 30 minutes at each operation.

1. To enter the **RANDOM FUNCTION**, press **DAY** and **HR** simultaneously. The word **TIMER** will then flash on the display to indicate **RANDOM** mode has been activated.
2. To cancel **RANDOM FUNCTION**, press **DAY** and **HR** simultaneously again and the word **TIMER** will disappear from the display indicating **RANDOM** mode has been deactivated.

### Override switch


During those occasions when you are at home early and you do not want your security light switch to operate as programmes, slide the **OVERRIDE SWITCH** so that **MAN** shows for manual only operation. Your pre-set programmes are still stored.

The switch can only operate via the **PUSH SWITCH**, once pressed the **RED LED** will flash.

To revert back to **AUTO** mode, slide the **OVERRIDE SWITCH** back to **AUTO**.

Once back in **AUTO** mode the **RED LED** will indicate when a pre-set programme is running.

- LED ON: Programme ON
- LED OFF: Programme OFF

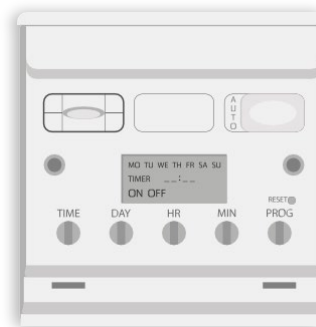

### Manual ON/OFF operation

When your pre-set programmes are all set up, close the front cover plate until it clicks into position, concealing the operation controls.

the upper part of the cover.

The position of the **OVERRIDE SWITCH** does not affect the operation.

**NOTE:** When the cover plate is up, the **RED LED** will still be visible, enabling you to check whether the system is in **AUTO** or **MANUAL** operation.

